



Assembly instruction **Audi A4 >2001, Audi A6, VW Passat**

Read this before assembly!

Carfully check for dirt and particles in all pipes and hoses. Also check for dirt inside the filter. At smallest hesitation, clean and wipe everything thoroughly before assembly!

Check hoses for deformations, cracks or other leakage. The clamps should be in good condition or to be replaced. Please note, when fitting BSR air filter, do not tighten the air filter to hard, be gentle. Check before and after testdrive that everything are tight and firm.



1. Material overview.




2. Remove the protective housing (1) and the inlet pipe (2).



3. Disconnect the electrical plugs 3a-3e and put the electrical harness aside. Remove the evap-valve (4) from the air box. Remove the hose clamp (5) and open the binding clip 6a-6b holding the evap-pipe. Put aside. Unclip and remove the intake hose (7) from the air box. Remove the screw (8) holding the air box. Pull up and remove air box from vehicle.



4. Open the air filter box and remove the MAS (mass air sensor). Don't use the seal and the plastic intake.

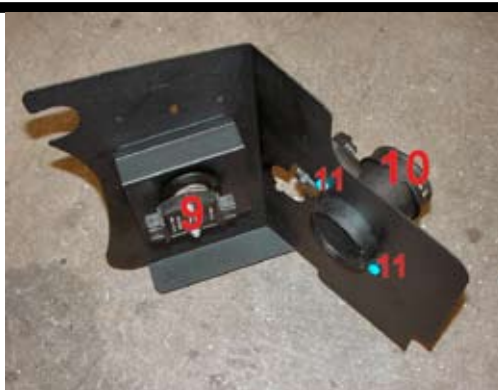

5. Attach amplifier (9), MAS (10) and the clips (11) to the heat shield.



6. Fit the heat shield into the original rubber bushings. Use the supplied bracket for mounting the heat shield. Lead the electrical harness through the "angled amplifier-holder" and connect the electrical plugs to the evap-valve, MAS, amplifier and air-valve.



7. Fit the BSR air filter and the intake hose to the MAS. Mount the evap-pipe using plastic ties and hose clip (supplied).



8. Mount the inlet pipe. Don't use the protective housing. Enjoy!